












CONTENTS

MAIN FEATURES	1
OVERVIEW CF-19	2
INFORMATION MENU*	4
HIJRI CALENDAR SETTING	9
PRAYER ALARM SETTING	10
CITY SELECTION	11
ADDING NEW CITY	12
TIME & CALENDAR SETTING	13
TAQWEEM SELECTION	14
FREQUENTLY ASKED QUES	15

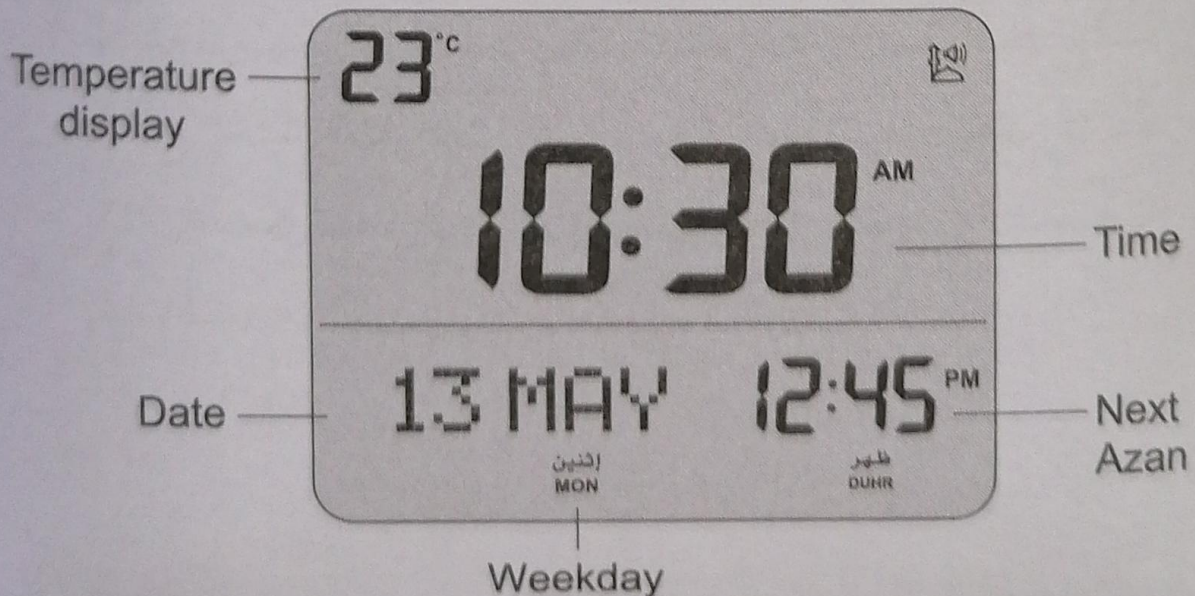
* Main Screen, Hijri Calendar, Azans, City Select
Setting Time & Calendar, Language Selection,
Calendar Select, Temperature Display, Time
Format, Azan Display, Azan ON/OFF Control,
Taqweem, DST Selection, Qibla, Moon Age,
Website, and Battery Level.

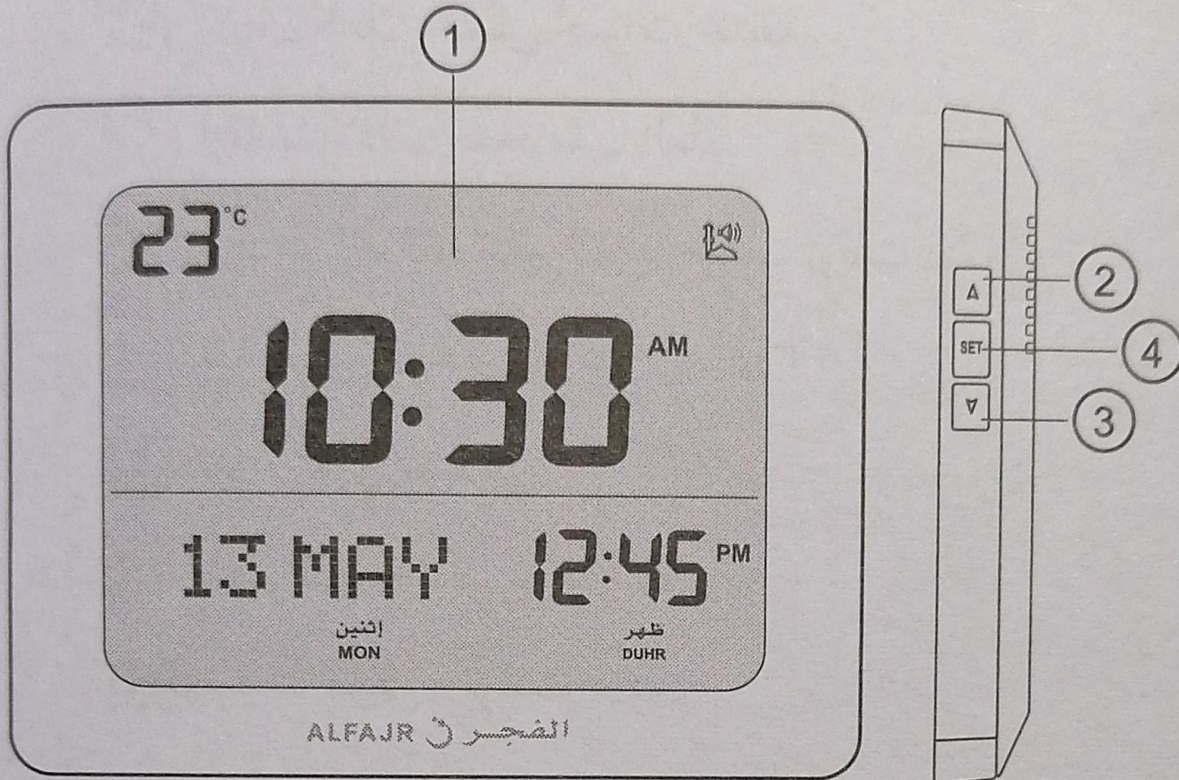
MAIN FEATURES

1

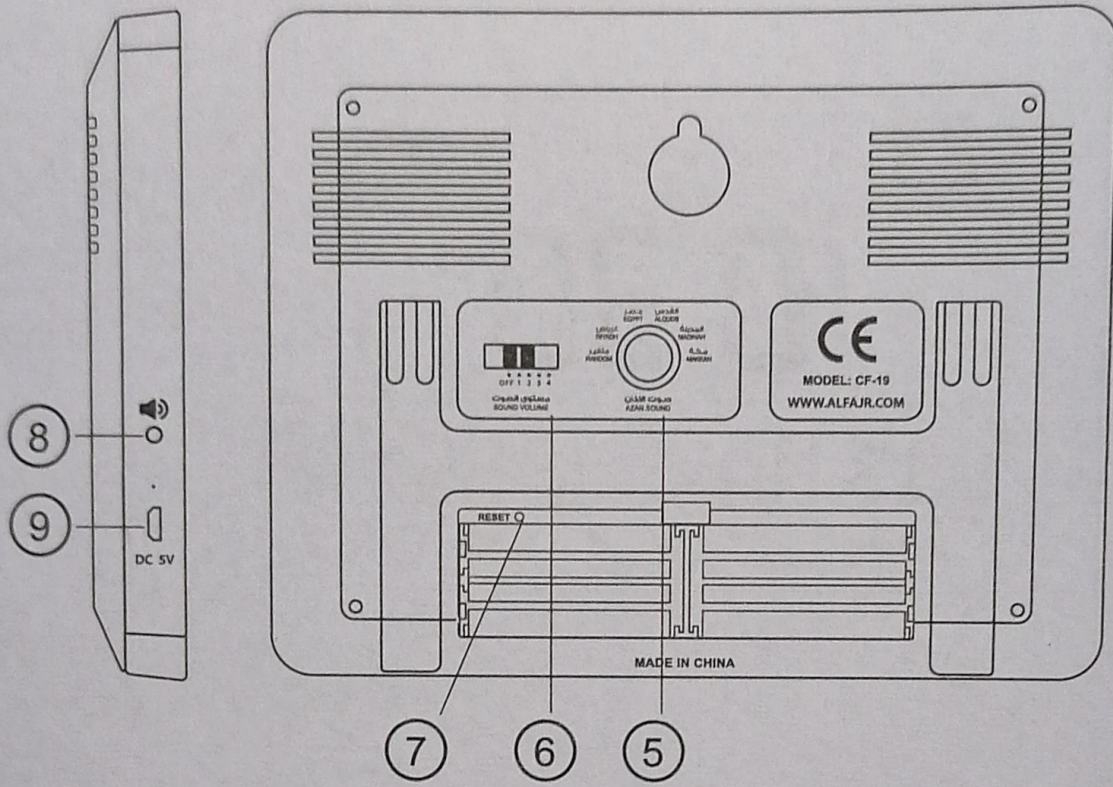
-  Azan sound in different voices
-  Azan times for all cities around the world
-  Prayer Alarms, adjusted automatically daily
-  Arabic / English languages (ENG عربي)
-  Hijri and Gregorian calendars
-  °C Temperature display °C / °F
-  DST Daylight saving time option (Automatic)
-  Low battery indicator
-  Qibla direction (relative to North)
-  Moon age in day & hours
-  Micro USB power socket

LCD Display

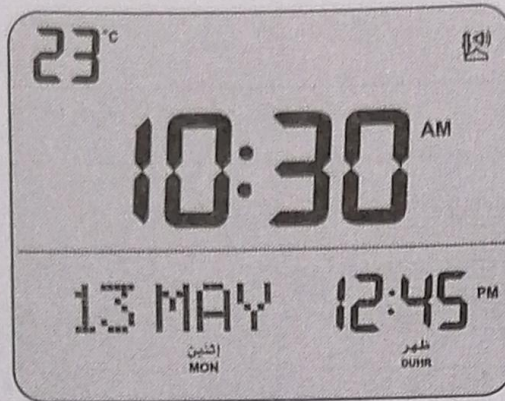





- 1- Main Screen: Displays current time, next azan, date (Gregorian or Hijri), and temperature.
- 2- ▲ UP button: Press to next screen.
- 3- ▼ DOWN button: Press to pervious screen.
- 4- (SET) SET button: Press & hold to start the setting.



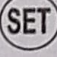
- 5- Azan sound selector: Press & hold to select one of the five azan sounds.
- 6- Volume switch: To control the azan volume.
- 7- Reset button: Press to reset the clock.
- 8- Speaker: Use this port for external speakers.
- 9- DC socket: To operate the clock thru external power (instead of AA batteries). Note that this socket does not recharge the batteries.



The Main Screen: displays current time, next azan, date (Gregorian or Hijri), and temperature.

Press  to move to the following screens.

13 SHAWWAL
1440

This screen shows the hijri calendar. To adjust hijri calendar (if needed), press & hold , see page 9.

-6:28
TO FAJR
A 5:16

This screen displays the next prayer time & the time remaining to next azan. In this example, -6:28 means fajr azan is after 6 hours & 28 minutes.

A 6:33
SHUROOQ

This screen displays Shurooq time. Also from this screen, you can set Shurooq alarm.

P 12:32
DHUHR

Dhuhr azan time. Also from this screen, you can set Dhuhr alarm.

<p>P 3:56 ASR</p>	<p>Asr azan Time. Also from this screen, you can set Asr alarm.</p>
<p>P 6:29 MAGRIB</p>	<p>Magrib azan Time. Also from this screen, you can set Magrib alarm.</p>
<p>P 7:59 ISHA</p>	<p>Isha azan time. Also from this screen, you can set Isha alarm. After waiting for few seconds, the clock will display the "Midnight" time.</p>
<p>A 5:16 FAJR</p>	<p>This screen displays Fajr azan time. Also from this screen, you can set Fajr alarm. In this screen, and after waiting for few seconds, the clock will display the beginning time of "the last third of the night".</p>

NOTE To set any prayer reminders, see page 10.

<p>CITY</p>	<p>From this screen you can select your city (see page 11).</p>
<p>12:30 TIME</p>	<p>This screen displays the current digital time. The time (analog & digital) and calendar can be adjust from this screen (see page 13).</p>
<p>ENG عربي</p>	<p>Language selection: English or Arabic.</p>
<p>CALENDAR</p>	<p>To display either the Gregorian calendar or Hijri calendar on the main screen. You can also select option "BOTH", to display both calendars interchangeably.</p>
<p>TEMPERA</p>	<p>The clock displays the temperature in degrees Celsius ($^{\circ}\text{C}$), and can be changed to Fahrenheit ($^{\circ}\text{F}$).</p>

<p>FORMAT</p>	<p>From this screen, you can select either 12 hours (AM/PM) or 24 hours time format.</p>
<p>AZAN DI</p>	<p>On the main screen, the clock display the "Prayer Interval" (to 30 minutes) after azan. From this screen you can change this option, to always display "Azan time".</p>
<p>AZAN ON</p>	<p>From this screen you can disable or enable azan sound of any of the five azans, independently. For example: if you wish to disable Dhuhr azan sound (because no one is at the home that time), enter the setting here and use ▼ & ▲ to set Dhuhr sound "OFF". The clock will play the other four azans only.</p>
<p>TAQWEEM</p>	<p>The clock uses the local (or the most widely used) taqweem system in your city. As needed, other taqweem systems can be selected (see page 14).</p>

DST

Daylight Saving Time (DST) selection. When DST is ON, all azan times and current time are advanced by one hour. In Europe & North America this clock automatically adjust the DST (Auto DST).

182°
QIBLA ↓

This screen displays the Qibla direction (relative to North). In this example qibla is 182° from north. i.e. south direction.

13d 9h
MOONAGE

This screen displays the Moon age (in days “d” and hours “h”). In this example, the moon age is 13 days and 9 hours.

WWW.ALF


website : www.alfajr.com


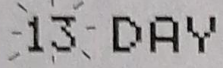



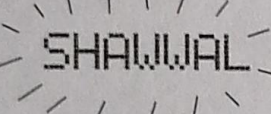



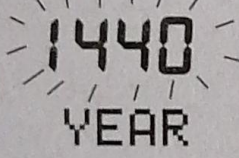





This screen displays the battery level. To display battery level in Volts, press & hold **SET**.

HIJRI CALENDAR SETTING

9

To change Hijri (or Gregoian) date*, press  once to reach Hijri screen, then follow the steps below:

13 SHAWWAL 1440	Press & hold  to enter setting.
	Use  or  to adjust day then press 
	Use  or  to adjust month then press 
	Use  or  to adjust year then press 

* To set Gregorian calendar see page 13.

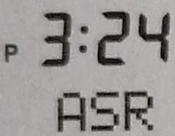
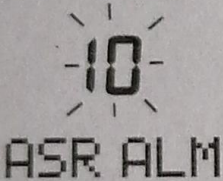
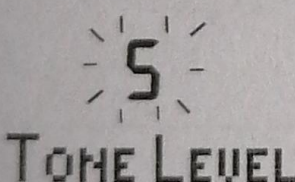
NOTE After changing the Hijri date, the Gregorian date will not change. But, after setting the Gregorian date*, the Hijri date is automatically adjusted according to the astronomical moon sighting at Makkah.

PRAYER REMINDERS SETTING


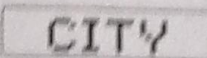

10

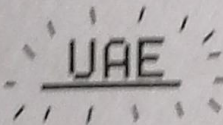



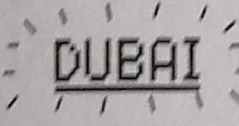



Prayer reminders (five beeps only) are useful for Iqama or prayer time. Each prayer reminder can be set to ring before or after the azan time by a fixed interval.

Example: To set Asr prayer reminder to always ring after the azan by 10 minutes, move to Asr screen, then follow the steps below:

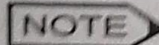
	<p>Press & hold SET to enter setting.</p>
	<p>Use ▼ or ▲ to adjust number of minutes (before or after the azan), or OFF, then press SET.</p>
	<p>Use ▼ or ▲ to select one from different prayer reminder volume, then press SET.</p>


NOTE In the default setting, all prayer alarms are set OFF.

To select any city in the clock, press  several times to reach  screen, then press and hold  to start setting, then:

	Use  or  to select your country* then press  .
	Use  or  to select your city* then press  .

* If your country or city are not listed, refer to page number 12.

 After change the city, the time and the new azan times of the new city will be adjusted automatically.

 If azan times are not correct, make sure to correctly set: The country and coordinates, Gregorian calendar, DST option, and a suitable taqweem system for your city.

Any location around the world can be selected using latitude, longitude and GMT information.

For example, the following steps show how to set the city of Corvallis, in USA with latitude (**44° 34' N**) and longitude (**123° 16' E**), and **GMT-8:00** :

1/ From **CITY** screen, press and hold **SET**

2/ Press **▼** or **▲** to select Country "**USA**"
then press **SET**

3/ Press **▼** or **▲** to select "**NEW CITY**"
then press **SET**

4/ Adjust latitude (**44N**), press **SET** and
adjust minutes (**34**), then press.

5/ Adjust longitude (**123E**), press **SET** and
adjust minutes (**16**), then press **SET**



6/ Adjust GMT(**-8:00**) then press **SET**

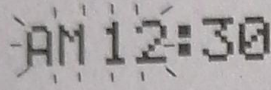



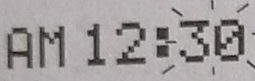


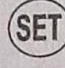
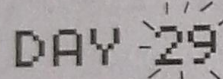



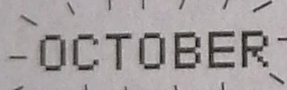



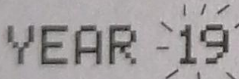



After above setting, this location is stored in the clock, and time of new city and new azan times are recalculated.

For more information please visit:

www.alfajr.com/newcity

NOTE If azan times are not correct, make sure to correctly set: The country and coordinates, Gregorian calendar, DST option, and a suitable taqweem system for your city.

To set the time and Gregorian (or Hijri) date*, press  several times to reach TIME screen, then press  to start setting, then:

	<p>Use  or  to adjust hours then press , notes AM/PM.</p>
	<p>Use  or  to adjust minutes then press .</p>
	<p>Use  or  to adjust day then press .</p>
	<p>Use  or  to adjust month then press .</p>
	<p>Use  or  to adjust year then press .</p>

* To set Hijri calendar, see page 9.

Your clock is already programmed to use the local (or the most widely used) taqweem system for your city. But, if you prefer to select another taqweem, follow the steps below:

- 1/ Press **▲** several time until reach to **TAQWEEM**
- 2/ Press and hold **SET** to enter setting mode
- 3/ Use **▲** or **▼** to select the desired taqweem, then press **SET** to confirm

Main Taqweem Systems:

Muslim League

Islamic Society of North America (ISNA)

Islamic Scientific University (Hanafi)

Egypt taqweem

Fixed (where Isha is 1:30 after Magrib
and Fajr 1:30 before Shuroq)

Um Alqura taqweem

Custom taqweem: To select new calculation methods for Fajr, Asr, and Isha azan times. You can also set azan safety times here.

Q: Can other cities be selected in this clock?

A: Yes, any location around the world can be selected, see page 12.

Q: Azan times are not correct. Why?

A: Make sure you have correctly set the following:
a) city name, **b)** Gregorian calendar, **c)** DST (Daylight saving time option), **d)** Taqweem system.

Q: Azan times for Fajr, Asr and/or Isha are not correct. Why?

A: There are different methodes to calculate these azan times. Make sure to select a suitable taqweem system (see page 14).

Q: Can I set the clock to play Magrib and Isha azan sounds only ?

A: Yes, you can play (or not play) any of five azan sounds independently, (thru azan ON/OFF control) see page 7.

Q: How can I restart my clock?

A: To restart the clock, press the **RESET** button, which is inside the battery compartment, (see page 3).